

## Orbita Lithium Batteries

### 5-year battery life

All battery operated SPARTA winders are fitted with high-energy, factory installed, LITHIUM batteries that provide approximately 5-years of battery life. In addition, each SPARTA winder carries an iron-clad 2-year product guarantee.

### Replacement

When the time comes to replace the Lithium batteries in your SPARTA winder, you may purchase replacements directly from us. You may also purchase locally if available. Should you purchase locally, be sure the battery specifics match. 3.6 Volts, 19,000 mAh.

## Customer Support

### Give Us A Shout!

Need a different size cushion? We have smaller and larger size cushions available. Call our toll free 800 number (below) and we will be happy to send you one, free of charge.

#### Online

[www.orbita.com](http://www.orbita.com)

#### Email

[info@orbita.com](mailto:info@orbita.com)

#### Phone / Fax

800-800-4436 / 910-256-5300




Made in USA

**ORBITA**<sup>®</sup>  
CORPORATION

1205 Culbreth Drive  
Wilmington, NC 28405  
[www.orbita.com](http://www.orbita.com)

**ORBITA**<sup>®</sup>  
WATCHWINDERS

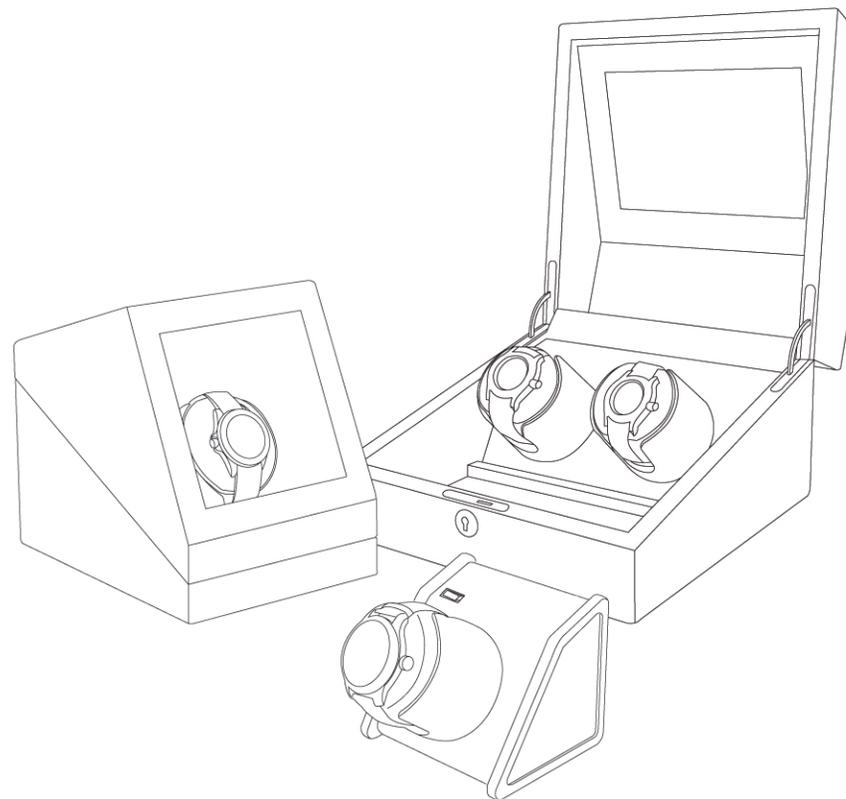

ROTORWIND<sup>®</sup> WATCHWINDERS

INSTRUCTION GUIDE



## Sparta 1 Open Lithium / Sparta 1 Deluxe Lithium

### Congratulations!

The Sparta user guide will help take you through the initial set up and programming of your new watchwinder. Your Sparta is factory-fitted with 2 ORBITA Lithium "D" cell batteries for each head which provide a minimum of 5 years guaranteed operating life at the normal 10-minute winding cycle. Even longer life may be accomplished using the 15-minute mode depending upon the watch's winding characteristics. If you purchased the Deluxe or Executive model, your winder is totally enclosed in a suede-lined wood case with a balanced lift-up top to facilitate watch mounting and provides complete protection for your valuable watches

### Included In This Box

1. Sparta Watchwinder
2. Cup Assembly (1 or 2)
3. Standard Cushion (1 or 2)
4. Lithium Batteries (2 or 4)
5. Warranty Registration
6. Instruction Book

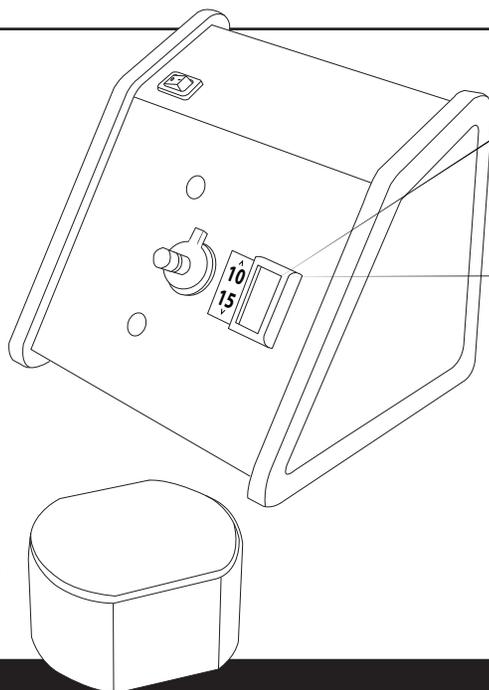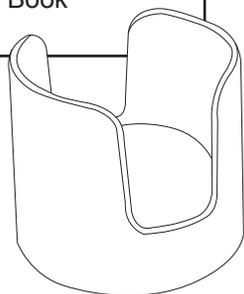


### Getting Started

#### Turning Power On

1. Remove the mounting cup and cushion.
2. Remove protective foam behind mounting cup(s).
3. Remove protective film over on/off switch(es).
4. Select 10 or 15 minute setting. (Details on Next Page)
5. Mount watch on cushion and slide cushion into cup.
6. Slide the cup back on to the drive shaft.
7. Turn the power on using power switch (o/-).


### Mounting Watch on Cushion

1. With the bracelet or strap of the watch **closed**, squeeze and slide the cushion through the watch. The back of the watch should rest against the Orbita logo and the strap should lie on the flat portion of the cushion .

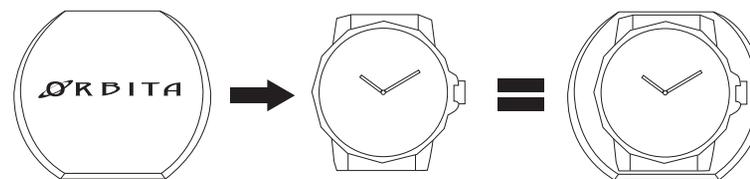

### 10/15 Minute Switch

A program switch allows you to select one of two winding cycles: 10 minute (standard program) or 15 minute (extended program). The winding cycle begins every 10 or 15 minutes based on the program selected. Many watches that wind in both directions stay fully wound on the extended setting. To select the extended program, remove the mounting cup to reveal the program switch opening. Insert a small object (screwdriver, pencil, etc) into the opening and slide the switch to the 15 minute setting. The factory preset position is the 10 minute setting.

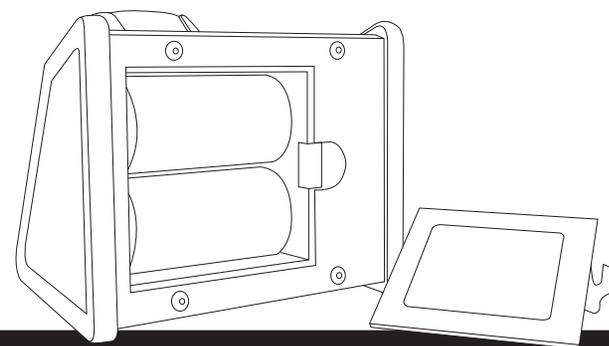

### Battery Removal

If you have a Deluxe or Executive model, remove the winder insert from the wood case by pulling towards you. To access batteries on the rear of the winder, remove the small phillips head screw on the battery compartment tab. Push tab to the left and pull compartment door open.